



WaterBoss 300 - Exploded View

Points "A" screw together
 O-Ring "B" slides over valve seat (3)
 Shaft at "C" passes through valve body and link actuator to "C"
 E-Ring (15) snaps over shaft at "D"

WaterBoss 300 - Parts List

- | | |
|----------------------------|-----------------------------|
| 1 – Nozzle Shroud | 10 – Valve Stem Bushing |
| 2 – Nozzle* | 11 – Valve Body |
| 3 – Valve Seat | 12 – Trigger |
| 4 – "O"-Ring | 13 – Link Actuator |
| 5 – Valve Stem | 14 – Stainless Steel Washer |
| 6 – Valve Guide | 15 – "E"-Ring (2 required) |
| 7 – Stainless Steel Spring | 16 – Housing |
| 8 – Spring Guide | 17 – Inlet Pipe |
| 9 – "O"-Ring | |

WaterBoss long Trigger (WB-300-1/2-L)
 WaterBoss short Trigger (WB-300-1/2-S)
 Repair Kit "A" contains parts 1 – 4 (WB-RK-300-A)
 Repair Kit "B" contains parts 1 – 10 & 12 – 16 (WB-RK-300-B)

*300 Series has two nozzle sizes. The standard nozzle has a small "+" on the front face. The additional nozzle tip is designed to reduce water consumption in gallons used per minute

Distributed by:



Glomatek Corporation
 6574 N State Rd 7, Unit 250
 Coconut Creek, FL 33073 USA

Tel: +1 954.861.0181 | Fax: +1 954.653.3148
 info@glomatek.com | www.glomatek.com

